
# Gateway SA1 Disk Drive Replacement

Written By: Diego Carteno

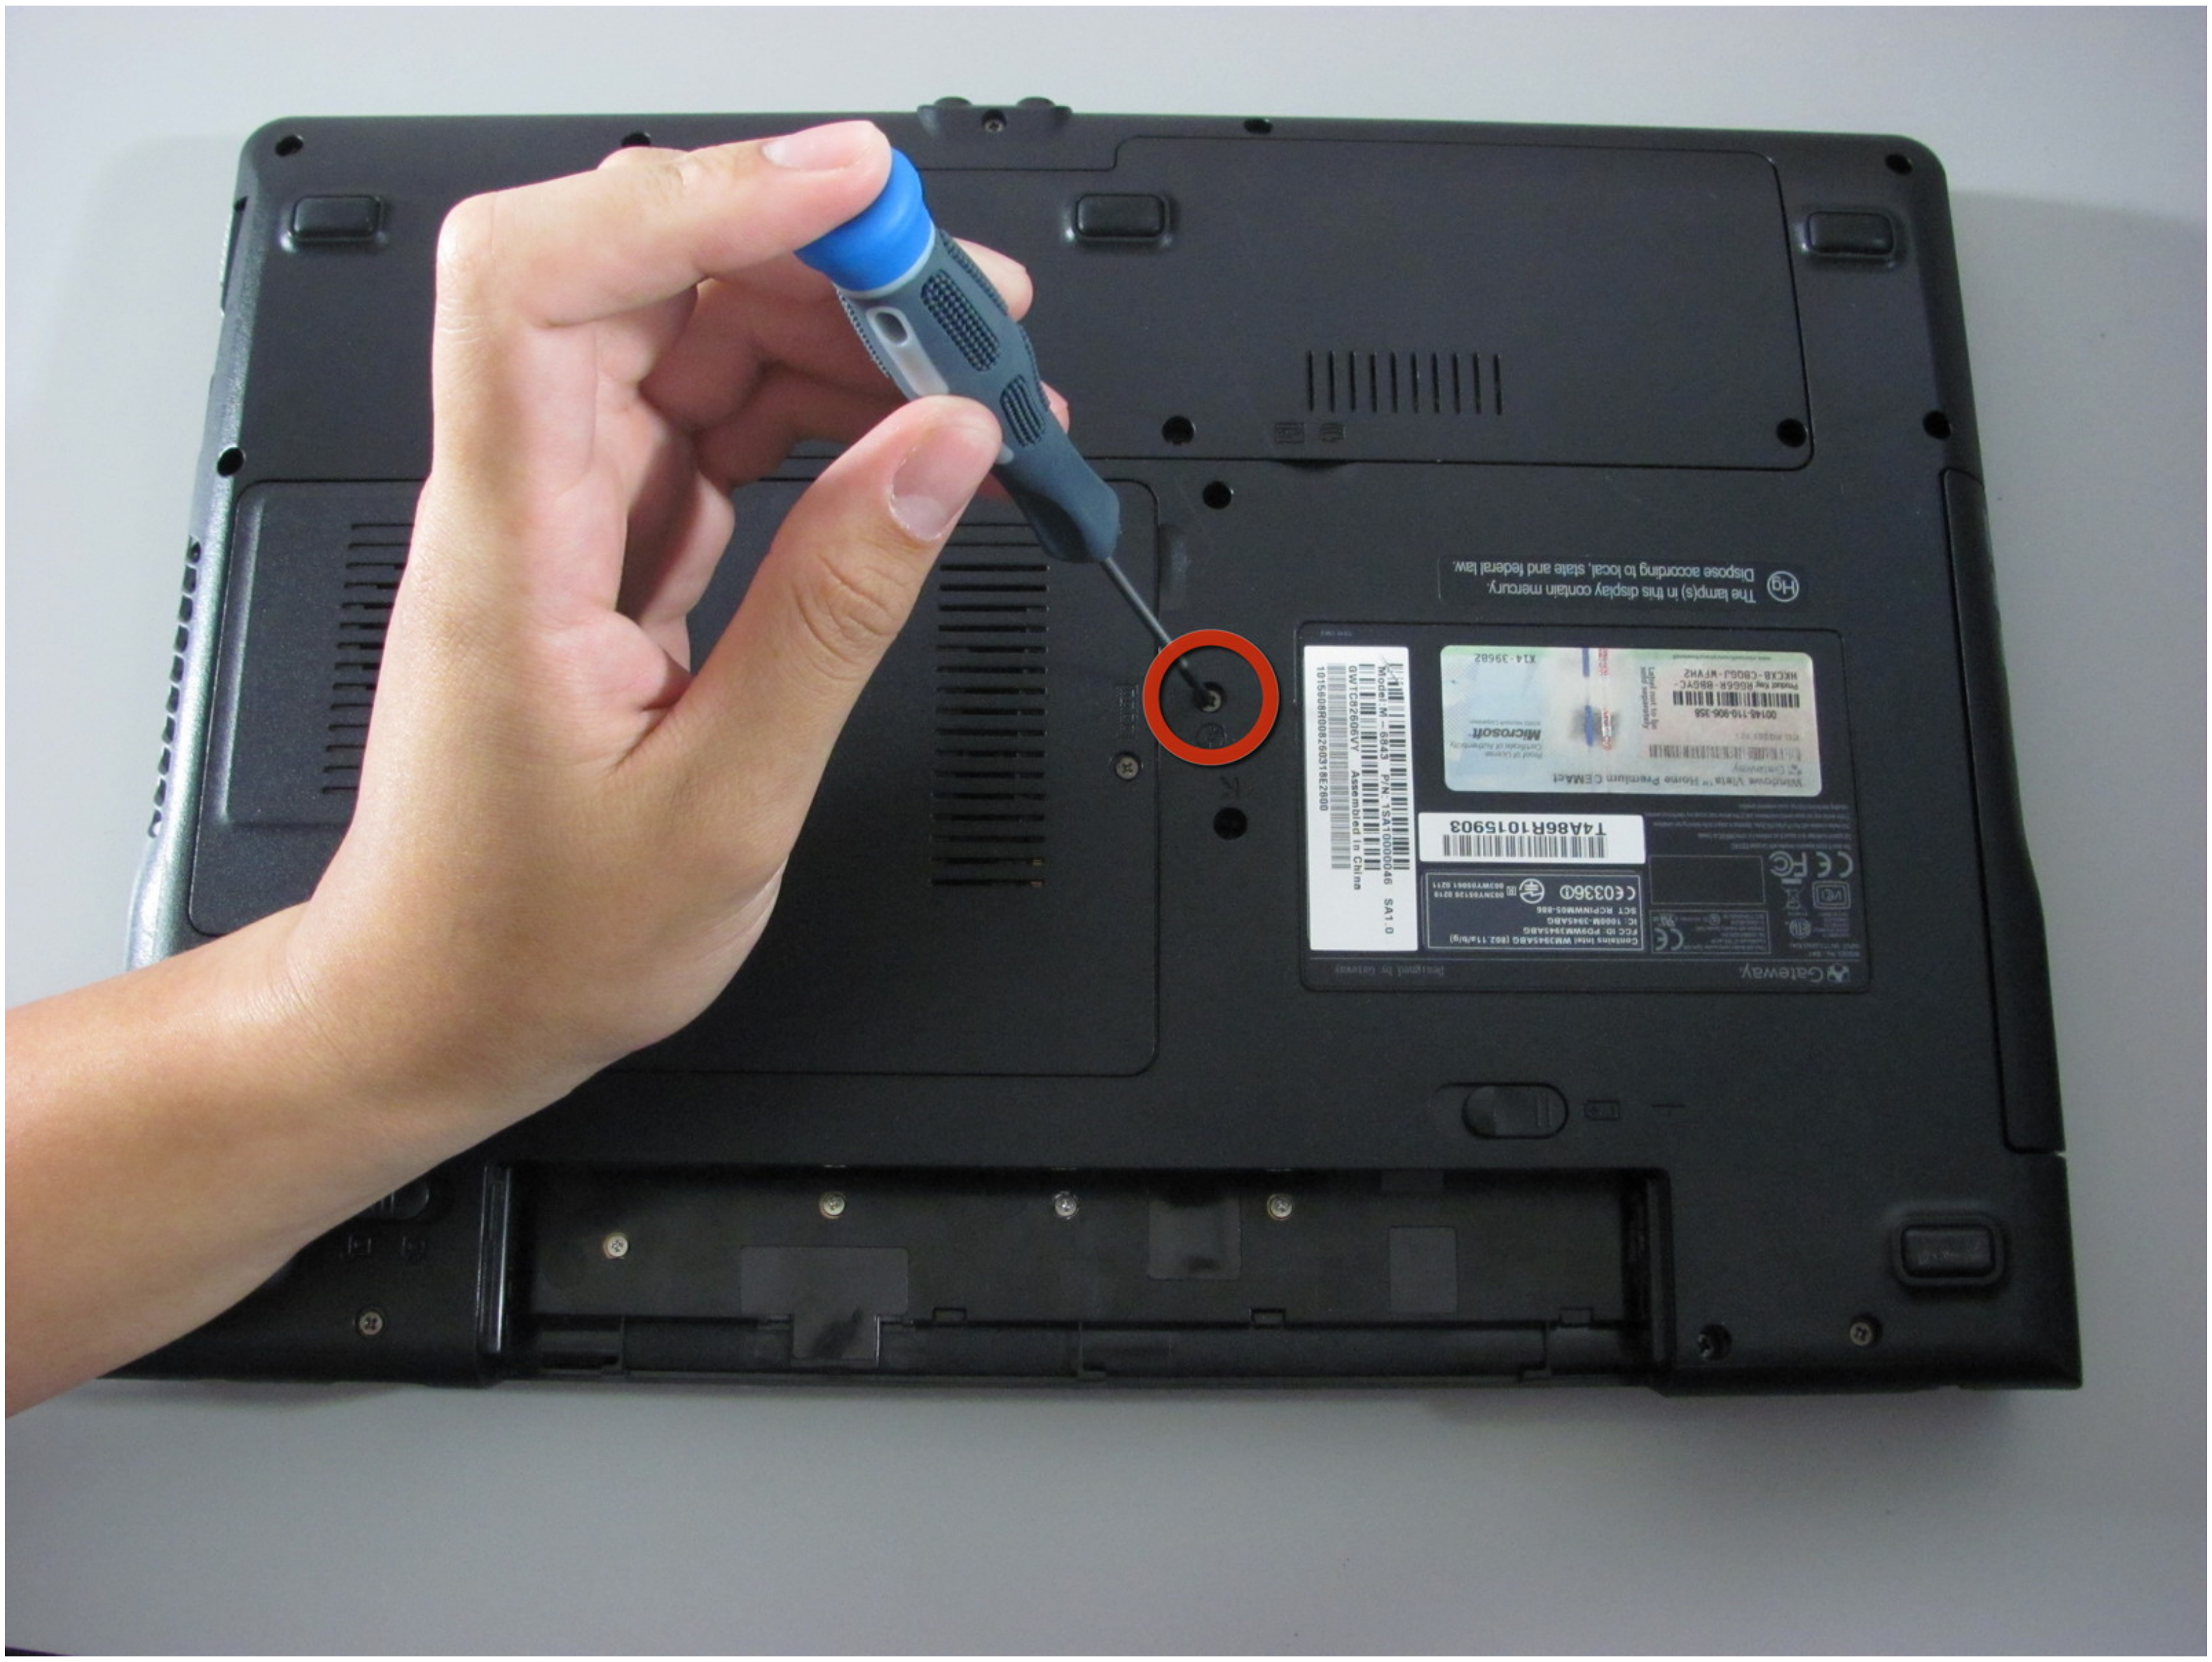

## INTRODUCTION

This Guide will help you replace a Gateway Disk Drive.

### TOOLS:

- Phillips #00 Screwdriver (1)
- Spudger (1)

### PARTS:


- Gateway SA1 Disk Drive (1)

## Step 1 — Battery



- Move the latch to the right of the battery to unlocked.


## Step 2

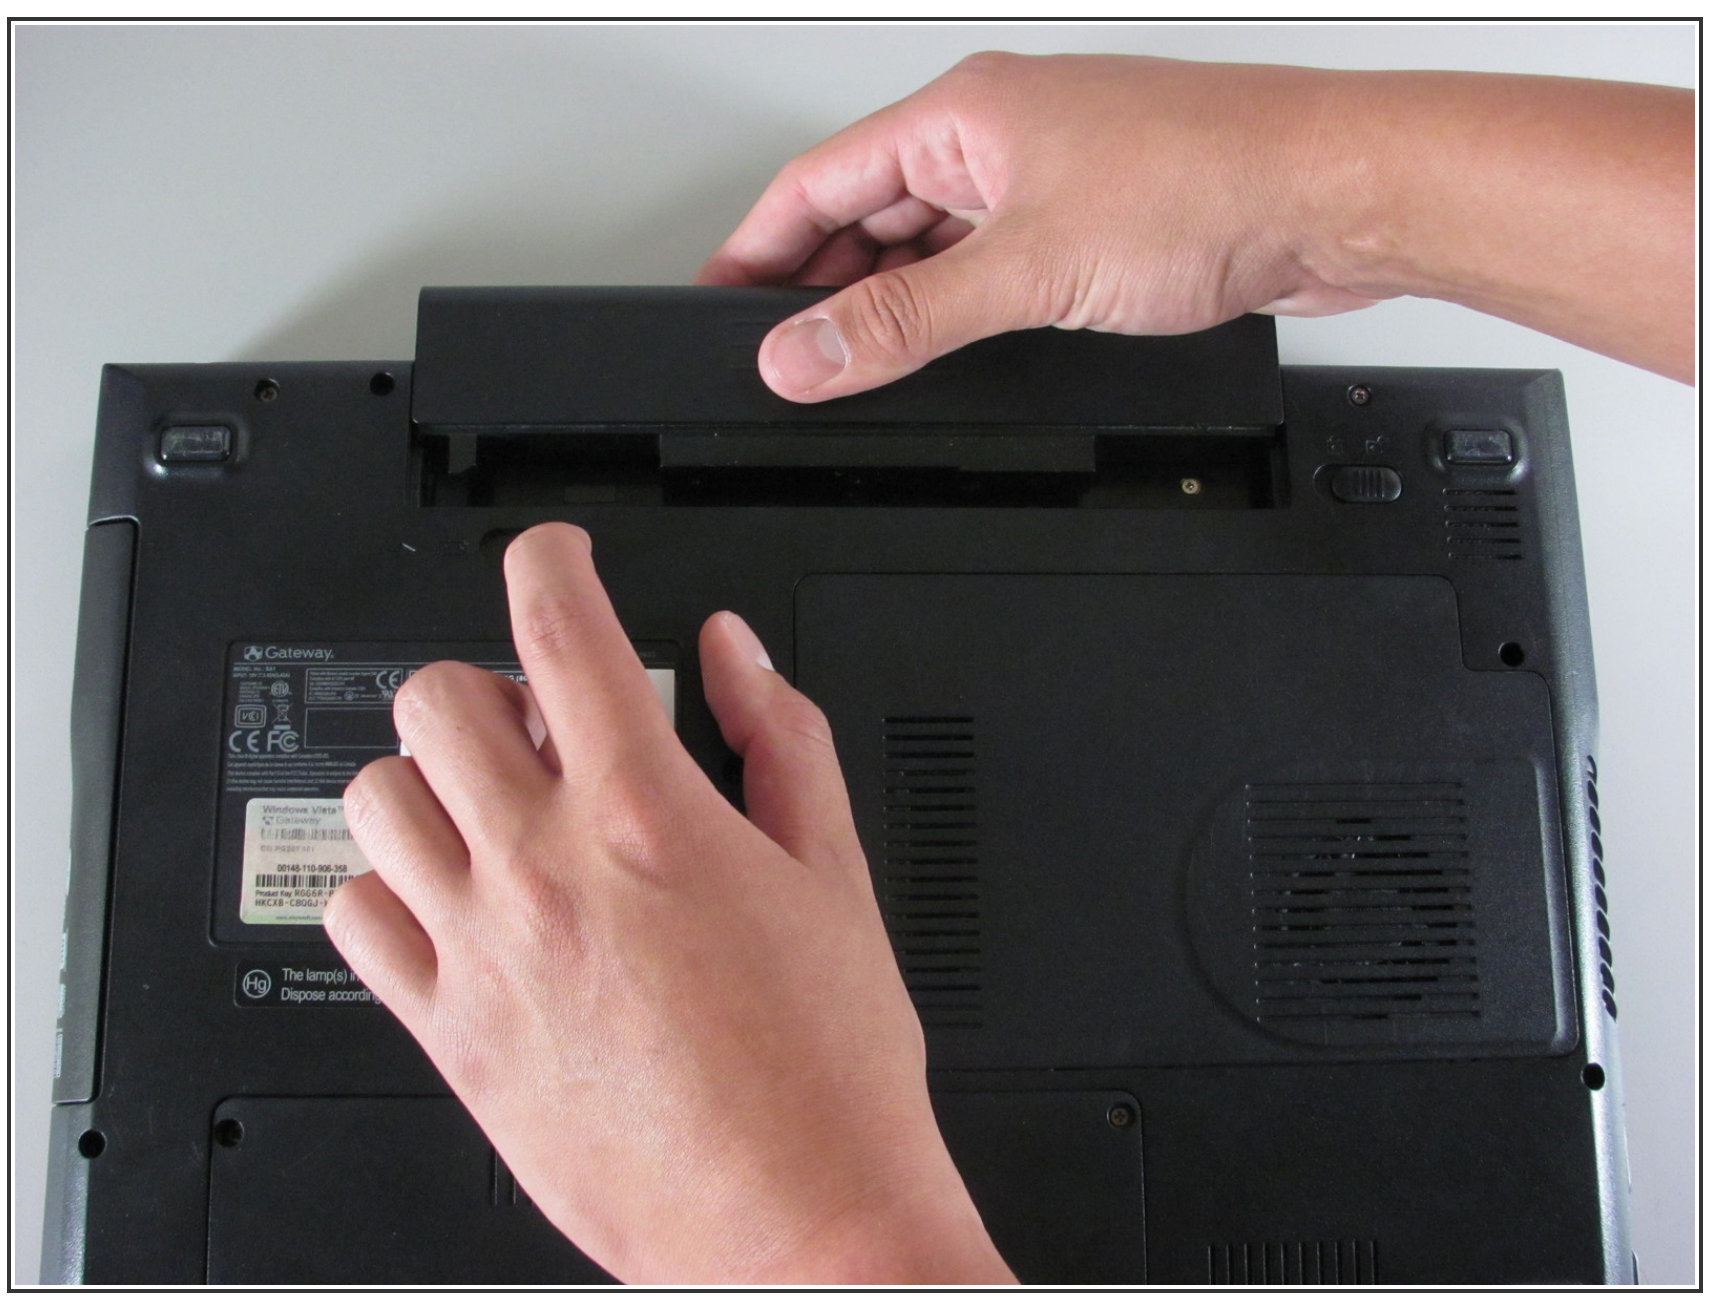

- Slide the latch on the left directly below the battery to unlock and pull out the battery as shown.


ⓘ The latch must be held in position to remove the battery.

## Step 3 — Disk Drive

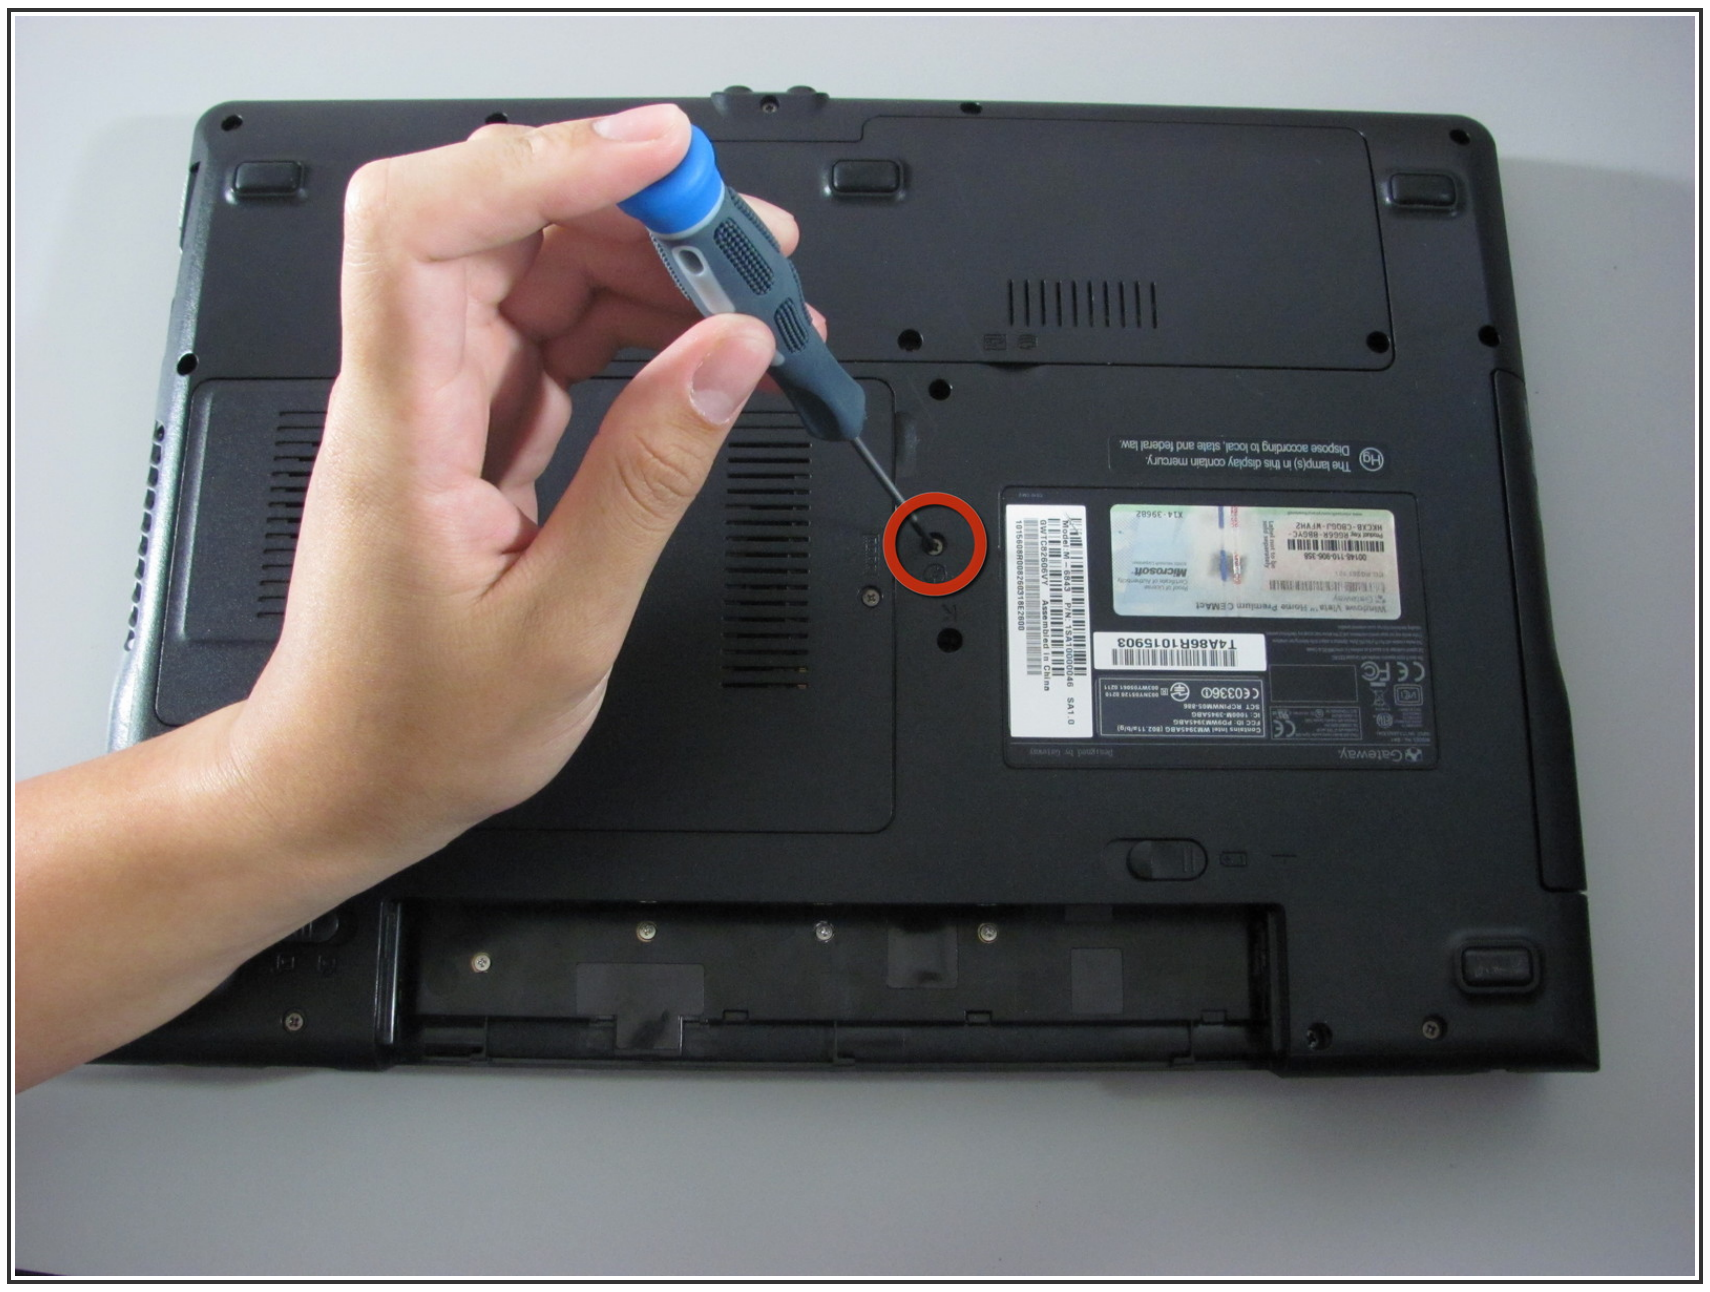

- Unscrew the marked 5.9 mm Philips screw.

## Step 4

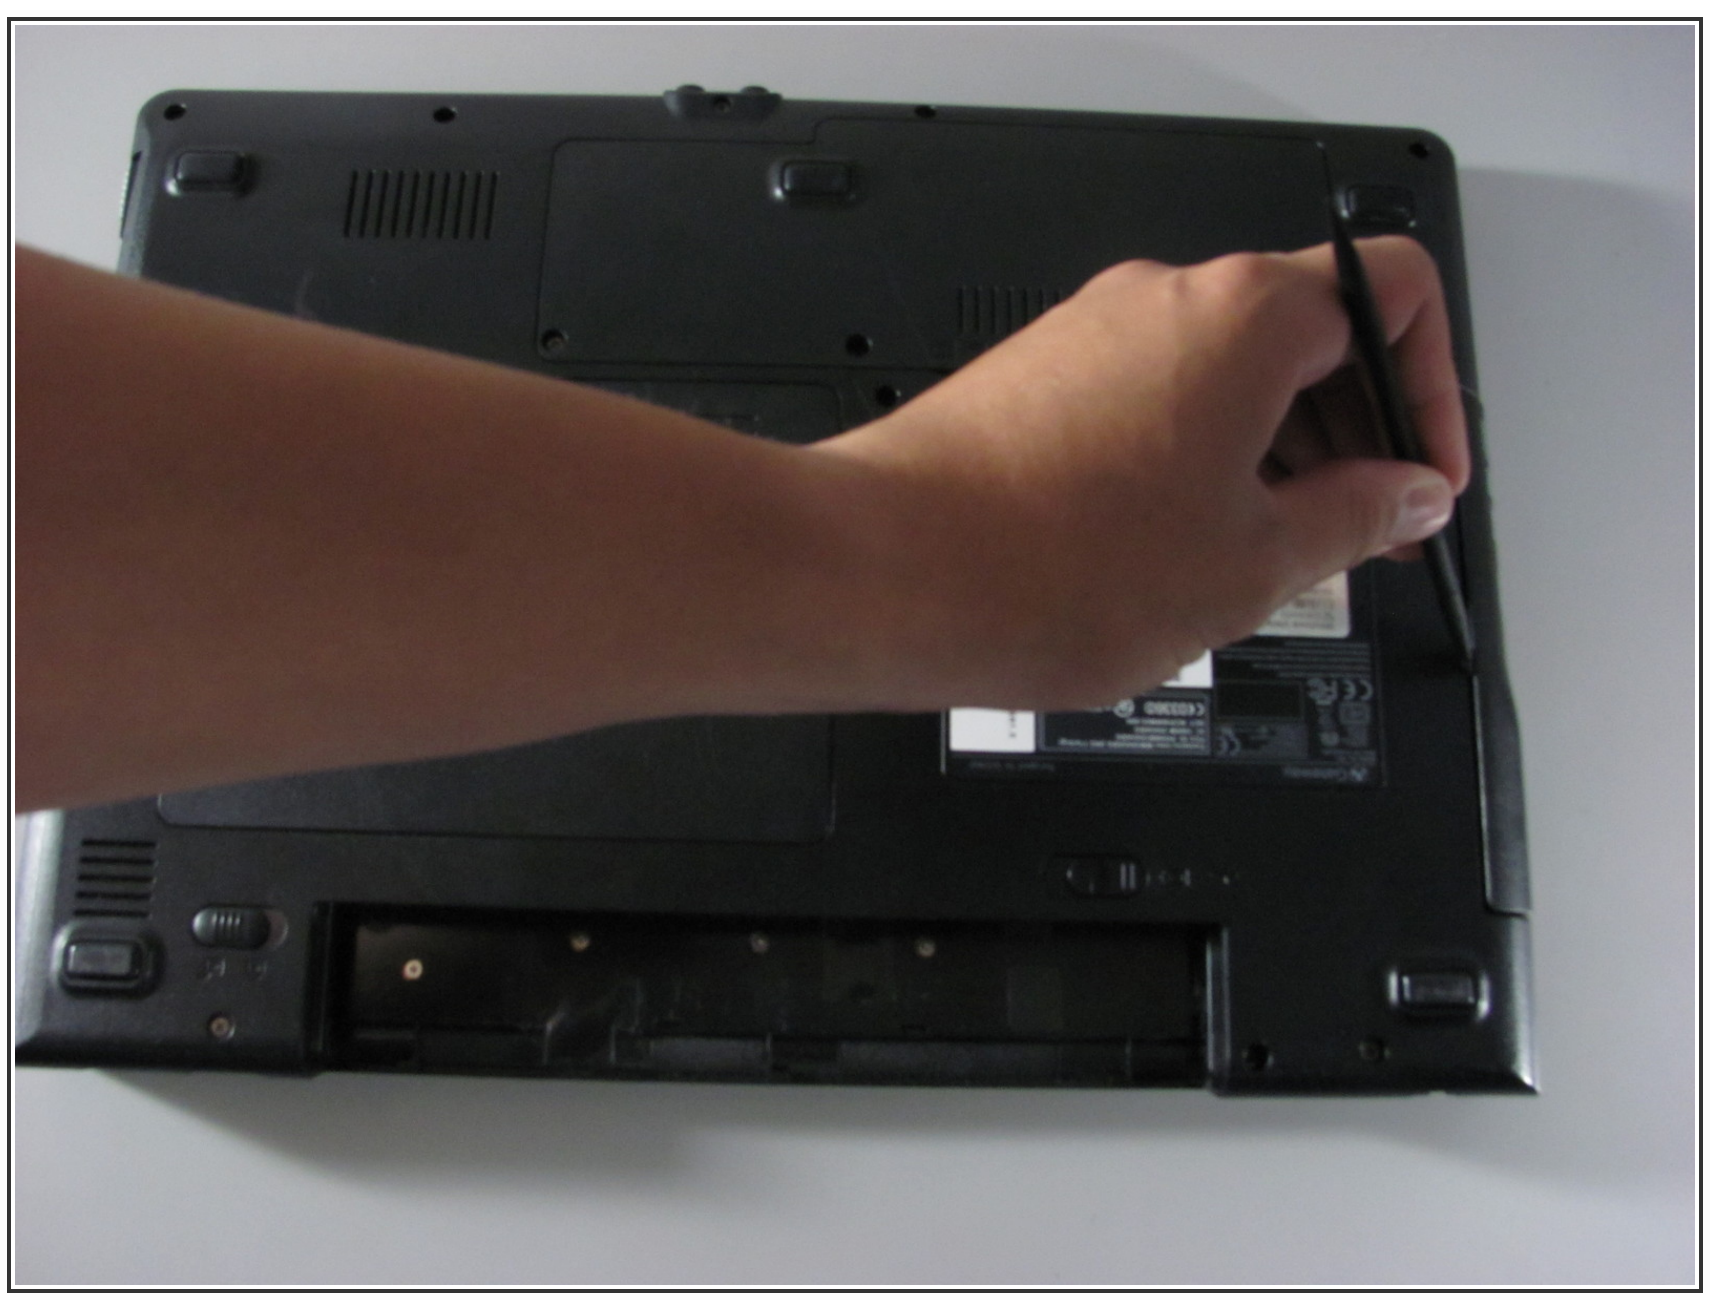

- Use the spudger to pry out the Disk dive.

## Step 5



- The disk drive should easily detach and can now be replaced.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-16 03:32:48 PM.